


Choose Your Freight Now in Two Easy-to-Assemble Sizes


Freight shipping can open up new doors for your business — even if you don't have time to classify each item. Our new freight box makes transporting less-than-truckload shipments simple, with improved flexibility, increased security, and best of all — **no freight classification.**

The **FedEx Freight® box** comes in two sizes — a standard size freight box that requires a pallet to ship, and a smaller freight box with an integrated pallet. The freedom to choose your freight box makes freight shipping accessible for any business, no matter the size. Assembly is easy — just follow the instructions and start shipping.

Standard FedEx Freight Box Assembly Instructions (4 pieces)

- 1. Place un-erected pre-glued in-fold tray on skid. Fold up the sides of the tray. This will serve as the bottom of your box.
- 2. Take the three-sided panel and place it inside the bottom tray. Load products or contents into the box.
- 3.Then take the single-sided panel and place it inside the tray around the products or contents. This panel should fit inside the three-sided panel.
- 4. Once all panels are inside the bottom tray, carefully fold up the sides of the other in-fold tray and place it on top of the panels.
- 5. Your freight box should now look like this.
- 6. Before shipping, band the entire unit vertically to the skid with four straps. Optional step: After banding the freight box, wrap film around the entire unit horizontally.

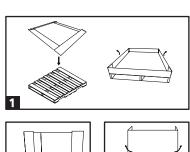










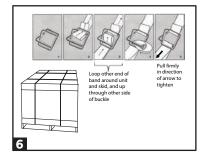

Smaller FedEx Freight Box with Integrated Pallet Assembly Instructions (2 pieces)

- 1.Cut the bands around the unassembled box. Remove the unattached out-fold cap part from the skid and set aside.
- 2 Lift up the attached main body and open by pulling out the three inner flaps.
- 3. Fold in the straight-edged flaps. Then fold in each notched fla so that the notched flaps sit outside the straight-edged flaps.
- 4. Set the body down flat onto the skid, making sure the body is square on the skid. Load products or contents into the box.
- 5. Now grab the out-fold cap and pull up the sides to open.
- 6. Place the inverted out-fold cap on top of the body. Make sure the edges are placed outside the main body.
- 7. Before shipping, band the entire unit vertically to the skid with four straps. Optional step: After banding the freight box, wrap film around the entire unit horizontally.

